



Unit 3, 8 Hayden Court, Myaree WA 6154
 Phone (08) 9317 4322, Fax (08) 9317 4465
www.powercontrol.com.au

Micro Switch Cam Rest Position
 See Vertical or Horizontal Arm Installation Instructions for Micro Switch activation sequence.


Micro Switch Cam Adjustment Screw

SW 1 Micro Switch Is the ALARM SWITCH
 Factory Preset to switch on when the roller arm moves 5°

SW 1 & SW 2 Cam Rotation

SW 2 Micro Switch Is the TRIP SWITCH
 Factory Preset to switch on when the roller arm moves 10°

The ALARM & TRIP SWITCHES may be adjusted by loosening the Micro Switch Cam Screws and moving the Cams backwards or forwards to the desired Limit Switch Set Point, and then retighten the Micro Switch Cam Screws for operational use.

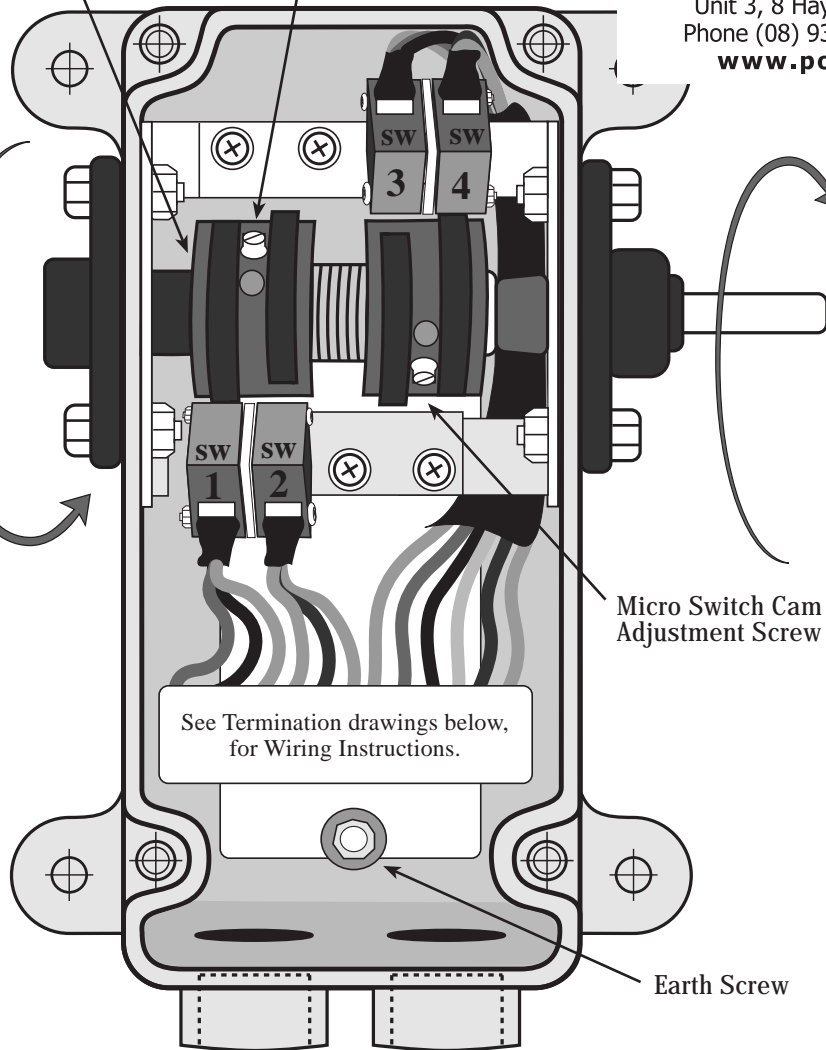

SW 3 & SW 4 Cam Rotation

SW 3 Micro Switch Is the ALARM SWITCH
 Factory Preset to switch on when the roller arm moves 5°

Micro Switch Cam Adjustment Screw

SW 4 Micro Switch Is the TRIP SWITCH
 Factory Preset to switch on when the roller arm moves 10°

See Termination drawings below, for Wiring Instructions.

Earth Screw

NOTE:
 Switches 3 & 4 and Switch 3 & 4 Cam only fitted in Part No's. STD-P/HB-D or STD-P/HB-D-K

