
Protective Stop Control Belt Misalignment Switch Electric Installation, Design, Setting Instruction and Technical Document **Micro Switch Cam Micro Switch Cam Rest Position Adjustment Screw** See Vertical or Horizontal Arm Telephone: (08) 9247 6700 Installation Instructions for Micro 0 Switch activation sequence. C ∈ Conformity \oplus \bigcirc P/No: STD-SSB **SW 1 Micro Switch** (8)(8)Is the ALARM SWITCH Factory Preset to 3 switch on when the SW 3 & SW 4 roller arm moves 5° **Cam Rotation** SW 1 & SW 2 **Cam Rotation SW 3 Micro Switch** Is the ALARM SWITCH Factory Preset to switch on when the **SW 2 Micro Switch** roller arm moves 5° Is the TRIP SWITCH Factory Preset to switch on when the Micro Switch Cam roller arm moves 10° **Adjustment Screw SW 4 Micro Switch** See Termination drawings below, The ALARM & TRIP Is the TRIP SWITCH for Wiring Instructions. Factory Preset to SWITCHES may be switch on when the adjusted by loosening the Micro Switch Cam roller arm moves 10° Screws and moving the Cams backwards or forwards to the

 \bigcirc

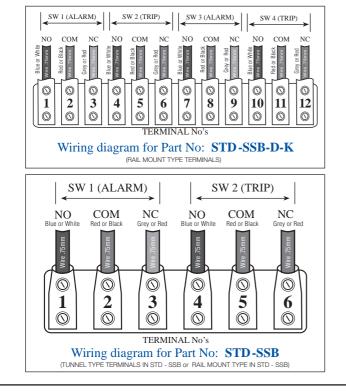


 \bigcirc

desired Limit Switch Set Point, and then retighten the Micro

Switch Cam Screws

for operational use.

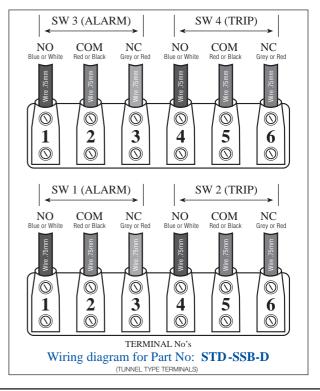

 \bigcirc


Earth Screw

Switches 3 & 4 and Switch 3 & 4

Cam only fitted in Part No's

STD-SSB-D or STD-SSB-D-K


edge to the under side of the Switch 160mm minimum from the belt Roller arm full travel Roller arm Set Point 9 1 See Micro Switch Installation Instructions for adjustment) **Use STD-HA arms with** STD-P-D / STD-P-D-K **Belt Direction** Conveyor **Top View** Switch Installation to required position (Factory Setting may be changed after FACTORY SET LIMIT SWITCH ALARM POSITION (ALARM LIMIT SWITCH ON) **SAFE-T-DRIFT** Installation to required position. (TRIP LIMIT SWITCH ON) be changed after Switch Installation Instructions (Factory Setting may FACTORY SET LIMIT SWITCH See Micro Switch **TRIP POSITION** for adjustment) In this position No's 1 (Alarm) activiated are the Switches and 2 (Trip)

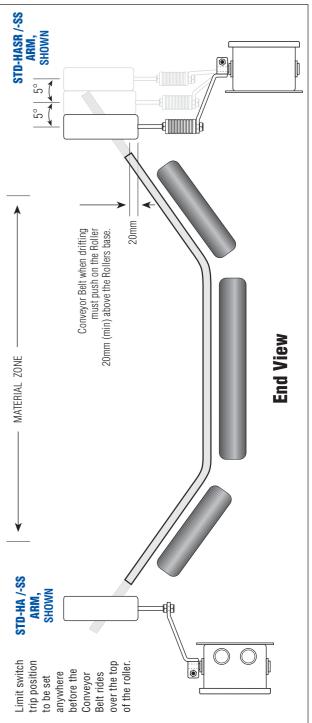

Part No's: STD-HA /SS; STD-HASR /SS;

Arm Installation Instructions

Recommended Belt Drift Switches to use with STD - HA/SS or HASR/SS HA Rollers are used for large items on conveyor Part No's: STD-SSB-D / -?.. STD-SSB-D-K / -?

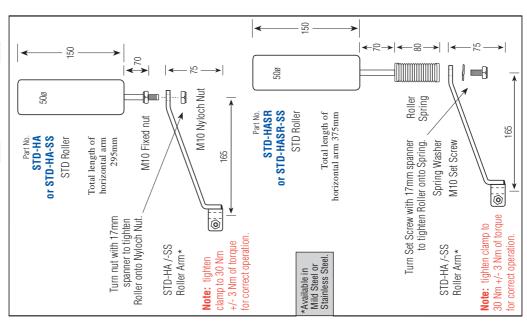

No's 3 (Alarm) and 4 (Trip)

between Roller and Belt -6mm minimum

Switches activiated are


In this position the


Telephone: (08) 9247 6700

Electric Control

Nade in Australia CE Conformity

www.safe-t-products.com.au

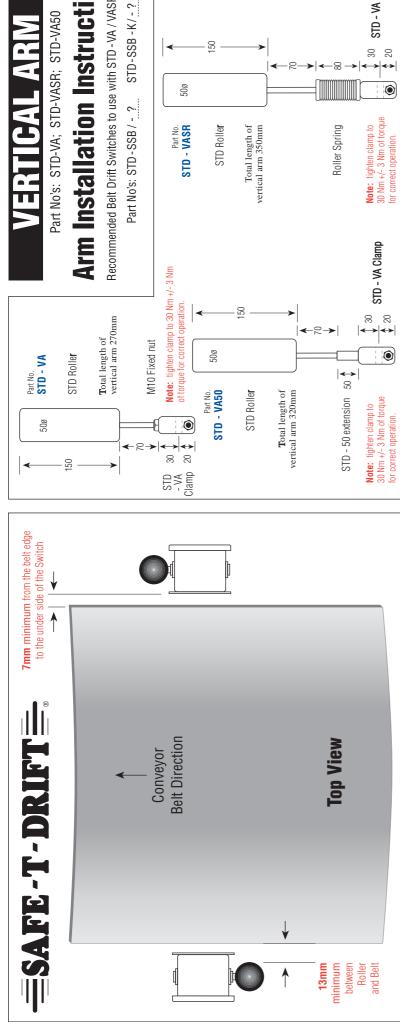


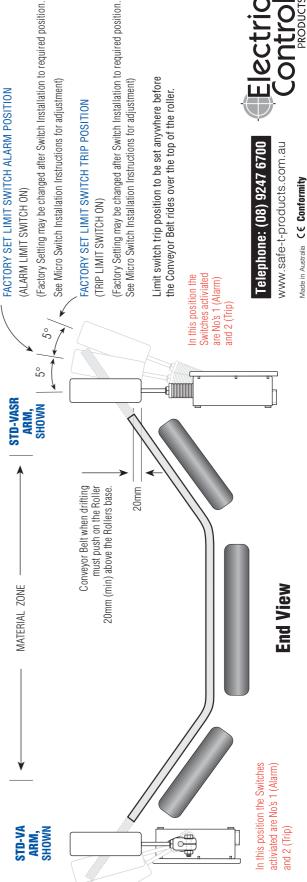

Part No's: STD-VA; STD-VASR; STD-VA50

Arm Installation Instructions

Recommended Belt Drift Switches to use with STD - VA / VASR /

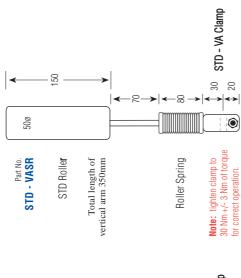



for correct operation.

The roller arm has the ability to

rotate 90° from its set resting

position in both directions,

so that you can get maximum

switch & roller reliabilty. The

arm returns to its set resting

belt drift travel and maintain



the conveyor may be restarted.

only returns when it is physically pushed back to position and then

the switch, and the arm rotates

over to the 90° position and

where the belt drifts and trips

can be preset to a position STD-SSB-LATCH the arm Using the Part No.

to its normal running position. position when the belt returns

Drift Switch visual flag indicator.

Eg. Use the roller arm as a Belt



P/N STD - SSB



Standards

The **SAFE-T-DRIFT** complies with the relevant parts of these Standards:

IEC 60947-5-1 ED. 4.0 Control circuit devices & switching elements AS 60947.5.1:2015 Control circuit devices & switching elements

AS4024.1-2014 Safety of machinery Ce Conformity to:

AS4024.3610-2015 Safety of machinery 98/37/EEC Machinery Directive AS4024.3612-2015 Safety of machinery 73/23/EEC Low Voltage Directive

Workshop Tested

All switches are tested by trained personnel before leaving ELECTRIC CONTROL PRODUCTS and have a date & name label of manufacture so that all relevant Standards are complied with and the product is in a full working order.

Modifications of Switch

Any modifications are **ONLY** to be made by ELECTRIC CONTROL PRODUCTS or one of their registered repairers. Any unauthorised modifications may not comply with the relevant standards and may diminish the integrity and workings of the switch and the warranty will become void.

ELECTRIC CONTROL PRODUCTS and their registered repairers or distributors will not be responsible for any damage caused to the altered switch or any item in, on, related or near the switch, nor any injury incurred, nor actions resulting from the unauthorised alterations.

Returns Policy/ Re Stocking

Please return any defective switch to place of purchase for assessment. If they are deemed to be warranty repairs or not. Return warranty switches as per warranty clause. Restocking returns will only be accepted if received by ELECTRIC CONTROL PRODUCTS in their original condition and within thirty (30) days of delivery date stated on delivery documentation. A restocking fee applies (contact place of purchase for costs).

Warranty

Electric Control Products of 18 Tambrey Way, Malaga 6090 Perth Western Australia contact telephone: (08) 9247 6700 or info@safe-t-products.com.au warranty period is **twenty four (24) months** from date of purchase or longer if indicated by Electric Control Products. For warranty to be valid the goods must be received by Electric Control Products before the end of the twenty four (24) month period. Electric Control Products warrants that if any product is defective, it will, at its option, replace or repair the product. **This warranty shall not apply to any defect which arises from improper use, failure to follow the products instruction, or any repair or modification made without the consent of Electric Control Products.**

The customer must contact the Distributor of the product or Electric Control Products of 18 Tambrey Way, Malaga 6090 Perth Western Australia via telephone contact (08) 9247 6700 or Email info@safe-t-products.com.au before returning the faulty product. If returned they must be suitably packaged and, where relevant, returned in accordance with any particular instructions which Electric Control Products or one of its distributors may have notified the customer at the time of contact for warranty. **Returned products must be accompanied by an advice note stating the nature of any defect being claimed.** Any products or parts which are replaced by Electric Control Products or one of its distributors shall become the property of Electric Control Products. **Title to replacement products shall pass to the customer on delivery, and the period of the warranty shall be calculated from the date of the defective product.**

All warranty returns to Electric Control Products will be sent by the customer's freight at their cost. All benefits under this warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



P/N STD - SSB



Maintenance Procedure

All **SAFE-T-DRIFT** switches require minimal maintenance but as in AS 4024 a maintenance procedure **must** be carried out.

Recommended 6 Month Maintenance

- 1. Visual inspection of enclosure to ensure IP rating and correctly operating device. i.e. Damaged enclosure, bent actuator rod, damaged dust boot, damaged roller etc.
- 2. Activate the **SAFE-T-DRIFT** switch via the roller making sure it moves freely and returns to its set position (Note: STD-LATCH won't return until pushed).
- 3. Inspect roller for wear or deterioration and replace if necessary.
- 4. After inspection, check the set position of the switch as per installation instructions.

Full Safety Maintenance Every 12 Months

Remove cover & check for corrosion or water ingress. Replace if necessary.

Check electrical connections for security and corrosion.

Clean lid seal and replace cover & torque down lid screws as per micro switch installation sheet.

All Plastic products

Product life expectancy

Electric Control Products estimate the product life expectance to 10-15 years

A shorter or longer product life may be experienced due to environmental situations.

Electric Control Products can't give a written life expectancy on any of its products due to the different situations the products are used.


Technical Support

Technical advice will be given at any time by Electric Control Products or distributor on any of the Electric Control Product range. Contact Electric Control Products or your local distributor for this service.

Obsolete Products

Notification will be given to distributors only for the products becoming obsolete and a time frame of when this will occur. Please contact distributor for this information.

The obsolete product range will have spare parts for 12 months after becoming obsolete, or until run out, complete products will be available for a short time after it has become obsolete.

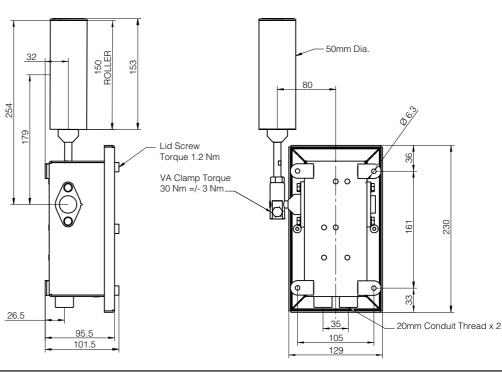



TECHNICAL SPECIFICATIONS



Safety Micro Switch with Direct Opening Action Specifications: Tested to IEC 60947-5-1

IEC 60947-5-1 Annex K classification	☐ Type 1	X Type 2 Direct Opening
Change-over contact element	X C □	Za 🗌 Zb
Contact material	Ag-Ni	
Utilization category	AC-15	DC-13
Rated Operational Voltage	250V AC	60V DC
Rated Operational Current	1.5 Amp AC	0.5 Amp DC
Frequency	50/60 Hz	_
Number of electrical cycles	6050 (6 min-1)	
Number of mechanical cycles	6050 (6 min-1)	
Short Circuit Protection Device	Fuse gG	
Ratings of SCPD	6A-690 VAC	