

1



Scan the QR Code for Installation Videos.

STP-E60

A


Once the STP-SH-1/-SS is mounted to structure. Position the Compensation Spring at a 90° angle to the Spring Holder and gently wiggle it down the keyway until it is resting in the Mounting Point.

Keyway

Mounting Position

STP-SH-1/-SS

STP-E60 COMPENSATION SPRING

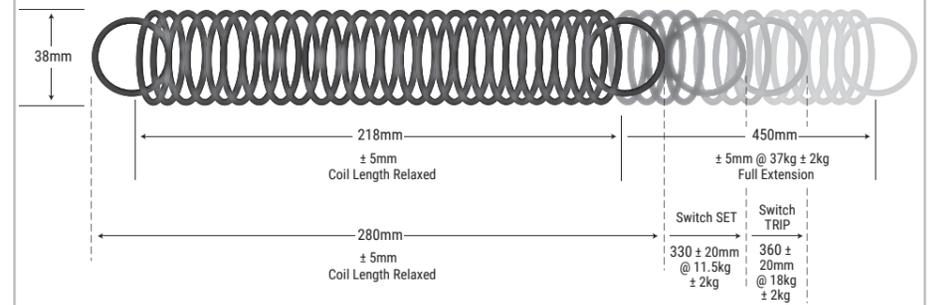

STP-E60

2

NOTE: Spring cannot lift off in this orientation.


B

Once the spring has cleared the key way and is now sitting in the Mounting Point, straighten it to 180° and connect to pull cord system.

Once the Spring is installed, it can only be removed by reversing the installation procedure.

180°

STP-E60 SPRING HOLDER ANGLED

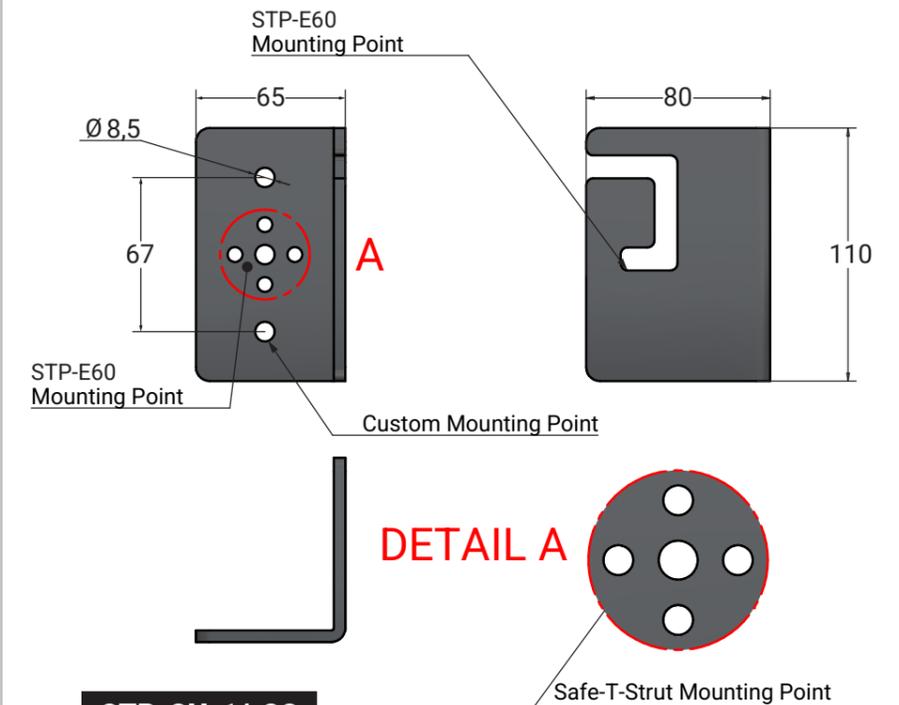

STP-SH-1/-SS